bouncepad®

Core Wallmount
Assembly Instructions
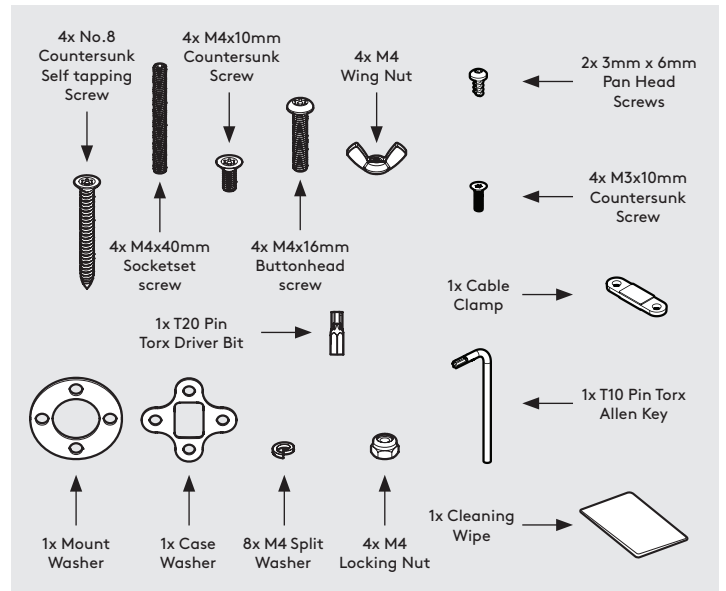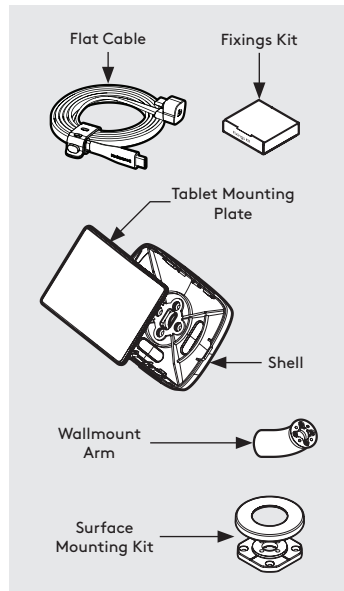
Tools Required:

- Pencil
- Electric Drill
- 7mm Spanner *or adjustable spanner*
- 5.0mm Drillbit *if fixing from below*
- 2.5mm Drillbit *if fixing from above*
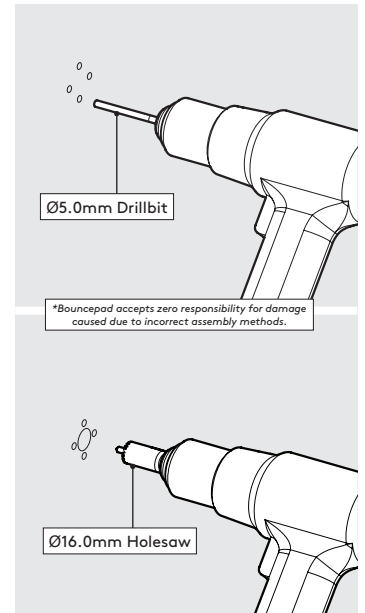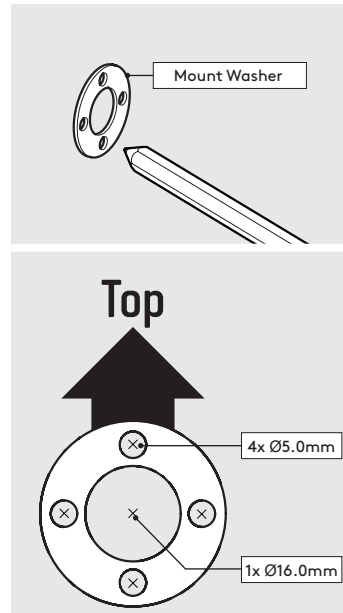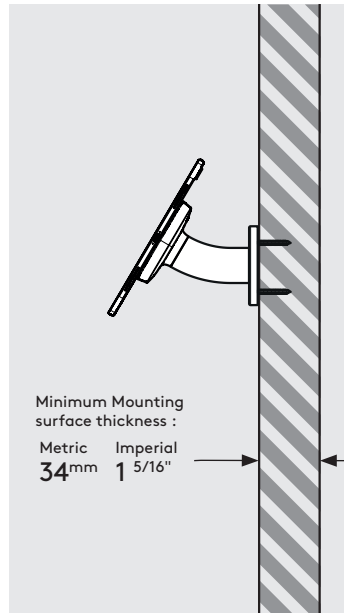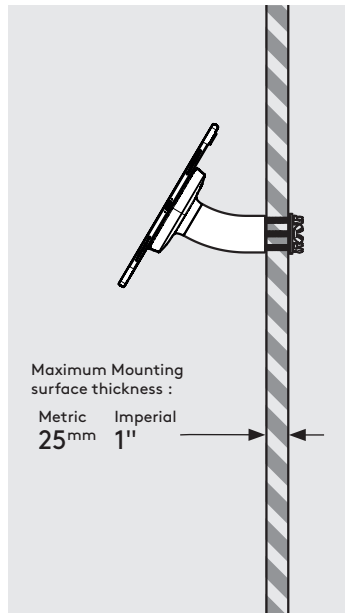- 16mm Holesaw *if routing the tablet cable through your mounting surface*
- Socket Driver

In the Box

- Flat Cable
- Fixings Kit
- Tablet Mounting Plate
- Shell
- Wallmount Arm
- Surface Mounting Kit

Fixings List

- 4x No.8 Countersunk Self tapping Screw
- 4x M4x10mm Countersunk Screw
- 4x M4 Wing Nut
- 2x 3mm x 6mm Pan Head Screws
- 4x M4x40mm Socketset screw
- 4x M4x16mm Buttonhead screw
- 4x M3x10mm Countersunk Screw
- 1x T20 Pin Torx Driver Bit
- 1x Cable Clamp
- 1x Mount Washer
- 1x Case Washer
- 8x M4 Split Washer
- 4x M4 Locking Nut
- 1x T10 Pin Torx Allen Key
- 1x Cleaning Wipe

Due to the modular nature of our product range you may receive additional fixings in the fixings kit
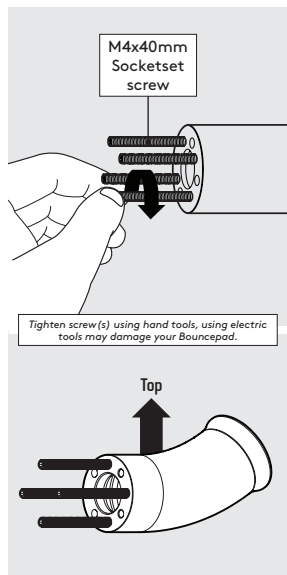

A Follow steps A if "Fixing from below".

Maximum Mounting surface thickness :
Metric 25^{mm} Imperial $1"$

B Follow steps B if "Fixing from Above".

Minimum Mounting surface thickness :
Metric 34^{mm} Imperial $1\,5/16"$

A1 Using the Mount washer, mark the drill hole locations as shown.

Mount Washer
Top
4x Ø5.0mm
1x Ø16.0mm

A2 Drill each hole - using the specified drill size.

Ø5.0mm Drillbit

Bouncepad accepts zero responsibility for damage caused due to incorrect assembly methods.

Ø16.0mm Holesaw
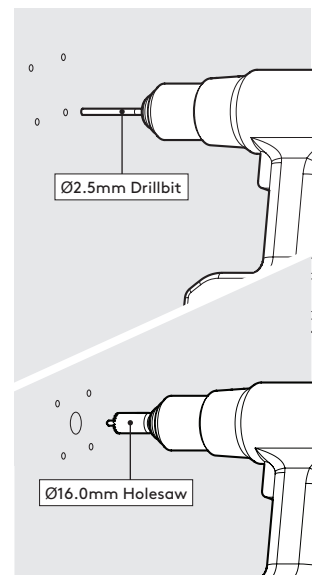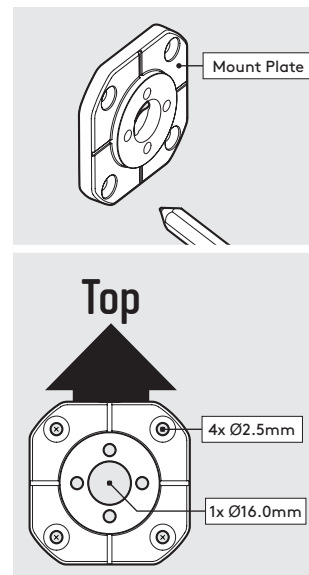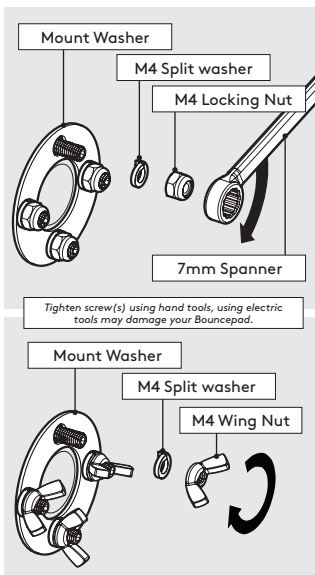
A3 Locate & screw the Socket screws into the Wallmount as shown.

M4x40mm Socketset screw

Tighten screw(s) using hand tools, using electric tools may damage your Bouncepad.

Top

A4 Secure the arm to the surface. Locking Nuts offer higher security.

Mount Washer
M4 Split washer
M4 Locking Nut
7mm Spanner

Tighten screw(s) using hand tools, using electric tools may damage your Bouncepad.

Mount Washer
M4 Split washer
M4 Wing Nut

A5 Go to step 1.

see overleaf

B1 Using the Mount Plate, mark the drill hole locations as shown.

Mount Plate
Top
4x Ø2.5mm
1x Ø16.0mm

B2 Drill each hole - using the specified drill sizes.

Ø2.5mm Drillbit

Ø16.0mm Holesaw
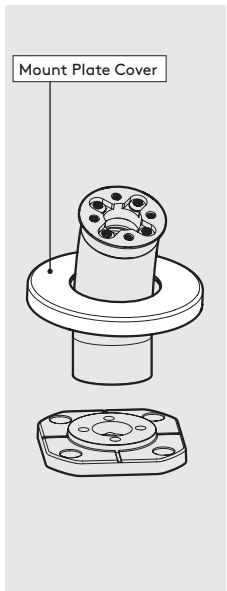
B3 — Locate the Cover to the Wallmount.
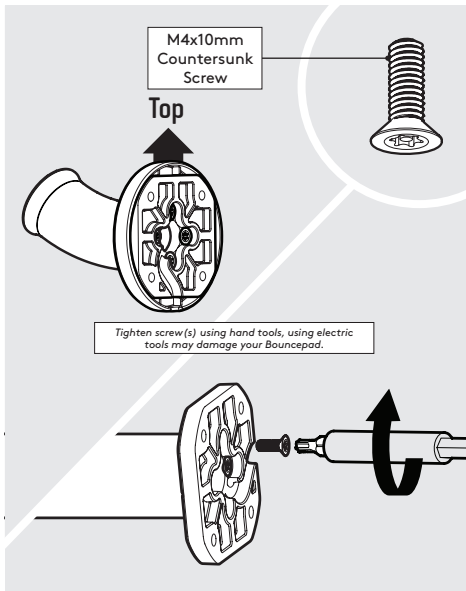
Mount Plate Cover

B4 — Join the Wallmount & Mount Plate in the orientation shown.

M4x10mm Countersunk Screw

Top

Tighten screw(s) using hand tools, using electric tools may damage your Bouncepad.
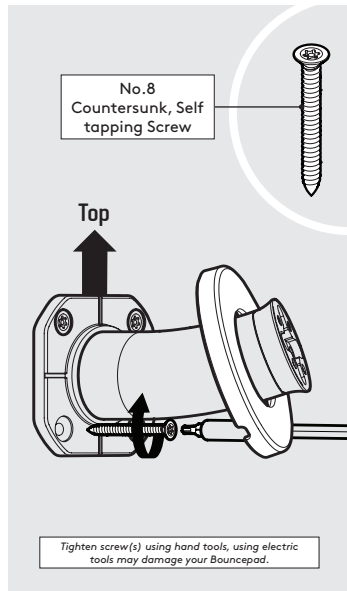
B5 — Secure the Wallmount to the surface with the 4x countersunk fixings.

No.8 Countersunk, Self tapping Screw

Top

Tighten screw(s) using hand tools, using electric tools may damage your Bouncepad.
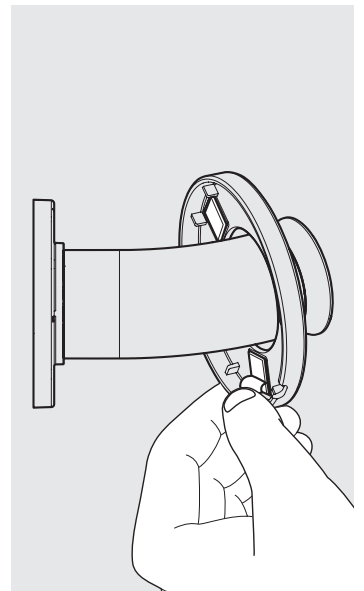
B6 — Adhere the Mount Cover onto the Mount Plate with the adhesive tabs.

B7 — Go to step 1.

Tighten screw(s) using hand tools, using electric tools may damage your Bouncepad.

T20 Pin Torx Driver Bit
M4x16mm Buttonhead screw
M4 Split Washer
Case Washer
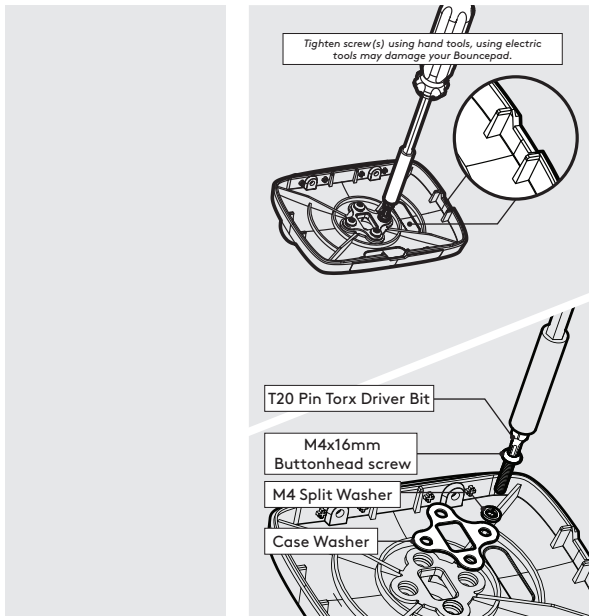
1 — Locate & attach the Shell to the Wallmount in the correct orientation.

*Before attaching the Mounting Plate, fully clean the back of the tablet with the provided wipe and allow it to fully dry.

For optimal adhesion, press firmly and leave for 72hrs in a 20°C environment before use. Do not reposition. Do not use prior to the 72hrs.
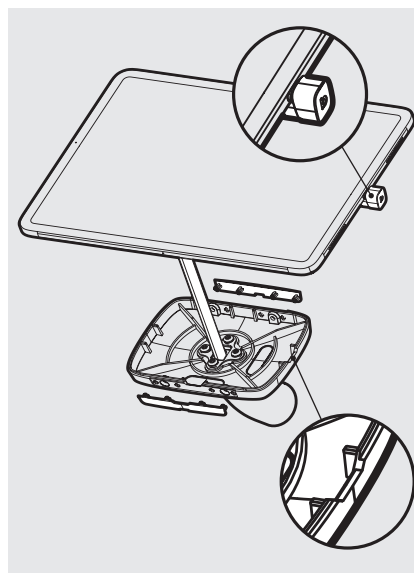
Landscape   *Portrait*
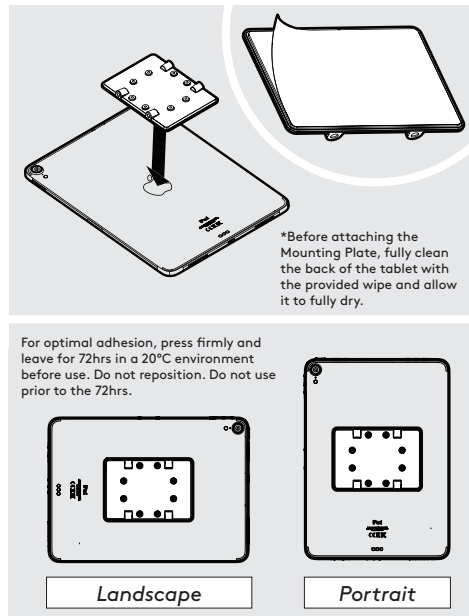
2 — Remove the Mounting Plate adhesive backing. Attach level & centrally to the Tablet back as shown.
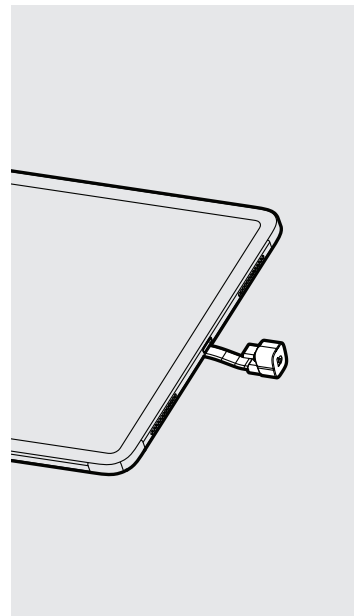
**3** — Attach the Flat Cable to the Tablet with the U-Bend Head.

2x 3mmx6mm Pan Head Screws
Cable Clamp
T10 Pin Torx Allen Key
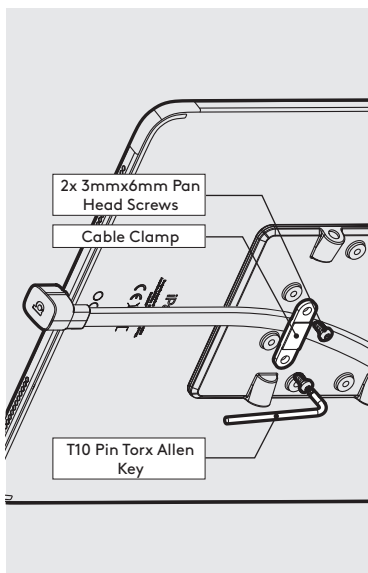
4 — Secure the Flat Cable to the Mounting Plate with the Cable Clamp as shown.

5 — Remove the Fixing Covers. Feed the Flat Cable into the assembly & locate the Tablet in the chosen orientation.

Top Fixing Cover
T10 Pin Torx Allen Key
4x M3x10mm Countersunk Screw
Bottom Fixing Cover
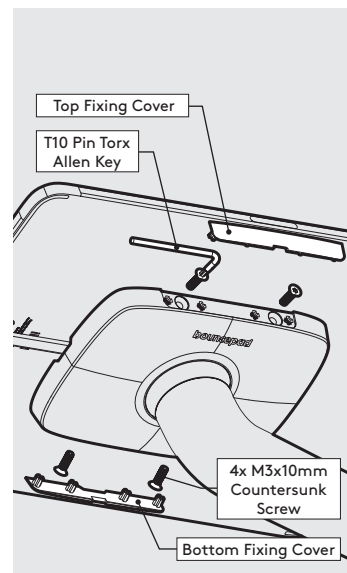
6 — Secure the Tablet to the Shell & attach the Fixing Covers as shown.
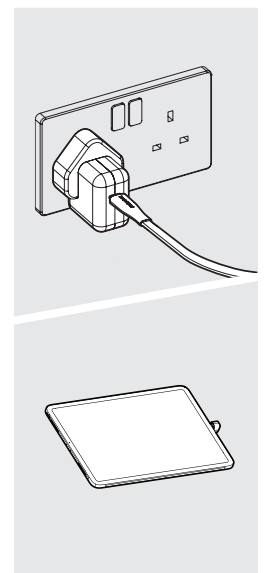
7 — Connect tablet to power & installation is now complete.